


Installation Instructions

Hydrophilic Waterstop



Application Procedures

1. Carefully brush off all dust and debris and apply a coat of appropriate ConSeal primer to the area where the CS-231/CS-235 Waterstop is to be placed.
2. Using the heel of the hand and moderate pressure, press a continuous bead of CS-231/CS-235 Waterstop firmly into position on the standing structure. Check to be certain that the sealant has bonded to the primed area.
3. *Splicing the ends to form a continuous, uninterrupted seal:* For best results, overlap the ends together by 2"-4". Gently knead the two ends, creating an uninterrupted seal. Keep joints away from corners. (see Diagram below)

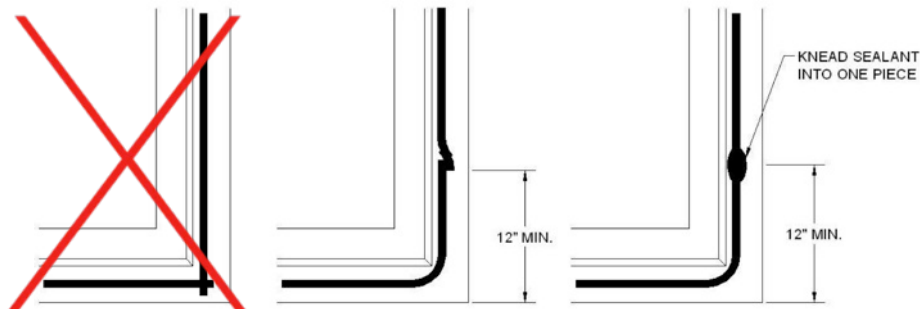

4. Peel the protective backing from the exposed side of the ConSeal™ CS-235.
5. Pour the mating structural member into position.

Application Notes

1. Always use an appropriate ConSeal Primer Product to avoid displacement of the CS-235 during concrete pouring. It may be necessary to utilize masonry nails or other mechanical means to hold the sealant in place on vertical surfaces.
2. Place CS-235 Waterstop so that it is no closer than 2" away from the outer surface of poured structure. If a keyway is utilized, place the CS-235 into the bottom of the formed keyway area.

Disclaimer: This publication is to assist users to understand the proper use of ConSeal's products. *Contact ConSeal's technical staff for installation instructions that meet your specific requirement.* Concrete Sealants, Inc. does not warranty any improper use of its products.

Don't Just Seal It, ConSeal It!

© 2013 Concrete Sealants, Inc.

Concrete Sealants, Inc. 9325 State Route 201 ■ Tipp City, OH 45371 ■ Toll Free 800.332.7325

P. 937.845.8776 F. 937.845.3587 ■ www.conseal.com

